



HITCH YOUR TRACTOR TO HIGH PERFORMANCE



## QUICK LOADING - LABOR SAVING

This heavy-duty spreader is easy to use. Use the hopper as a bucket in the lower position. Drive the tractor into the sand pile and then load. Put the spreader back in the upper position, start hydraulic control and spread the material. Can be operated by a single person. Normand's SCR+ spreader is perfect to spread sand, salt and other aggregate to control ice and snow on driveways, parking lots, sidewalks and other applications.

**SALT AND SAND SPREADER**  
**SCR +**




The cover has a self-locking hinge open position, to facilitate loading. The ice ripper makes it possible to grind the surfaces in order to de-glaze them. The weight of the spreader is added to the ice ripper to give it more grip. The ice ripper is bolted and made of carbon steel.

#### Front mounting




The Normand's SCR spreader can be fixed on most tractor's loader. Adjustable plates are installed on the spreader to receive various quick attachments available on the market.

#### Rear mounting

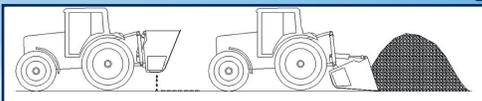

The Normand's SCR spreader is also available to be installed on a category 2 tractor's 3-points hitch. However an hydraulic cylinder system is required. (Optional)

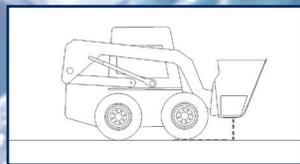


#### INSTALLATION ON SKID-STEER

The Normand's SCR spreader can be installed on loader of skid steer. An optional attachment can be fixed on spreader to receive the quick attach's skid steer. (Optional)

SPECIFICATIONS	SCR-54+	SCR-72+	SCR-86+	SCR-92+	SCR-98+
CAPACITY	0,57 yard	0,78 yard	1,35 yard	1,45 yard	1,55 yard
The capacity in lbs/kg may vary depending on the type of material being used.	1 340 / 608	1 700 / 771	2 670 / 1211	2 910 / 1320	3 160 / 1433
SPREAD WIDTH (IN/MM)	48" 1219	66" 1676	80" 2032	86" 2184	92" 2337
WIDTH (IN/MM)	54" 1372	72" 1829	86" 2184	92" 2337	98" 2489
DEPTH (IN/MM)	40" 1016	40" 1016	43,5" 1092	43,5" 1092	43,5" 1092
HEIGHT (IN/MM)	35" 889	35" 889	42" 1067	42" 1067	42" 1067
HYDRAULIC MOTOR WITH CUSHION VALVE AND CHECK VALVE	Include	Include	Include	Include	Include
DUCTILE IRON FLANGE BEARING WITH SEALING DEVICE	Include	Include	Include	Include	Include
EASILY ACCESSIBLE GREASING POINTS	Include	Include	Include	Include	Include
WEIGHT (LBS/KG)	500 / 227	607 / 275	835 / 379	870 / 395	910 / 413
REQUIRED GPM (MINIMUM @ MAXIMUM)	8 @ 16 GPM	8 @ 16 GPM	8 @ 16 GPM	8 @ 16 GPM	8 @ 16 GPM
PSI (MINIMUM)	1 300 PSI	1 300 PSI	1 300 PSI	1 300 PSI	1 300 PSI
<b>OPTIONS</b>					
COVER	Option	Option	Option	Option	Option
BOLTED ICE RIPPER	Option	Option	Option	Option	Option
QUICK ATTACH FOR TRACTOR FRONT LOADER	DEPENDING ON LOADER MODEL				
QUICK ATTACH FOR SKID STEER	Option	Option	Option	Option	Option
MECHANISM FOR INSTALLATION ON THE TRACTOR'S 3-PTS HITCH	Option	Option	Option	Option	Option

#### SPREAD

The flow of material spreaded is obtained by the control speed of the roller feeder as well as opening and closing of shutter.

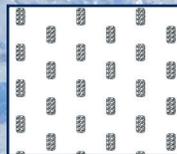

Cover and ice ripper available



**Normand Co. Ltd**  
340, Tache Street  
Saint-Pascal (Quebec) Canada G0L 3Y0

T : 418 492-2712  
1 888 666-7626  
F : 418 492-9363

E-mail : normand@ciennormand.com

www.ciennormand.com

www.facebook.com/ciennormand



The manufacturer reserves the right to modify the products shown without notice.

#### DEALER

© Normand® Co. Ltd 2022 All Rights Reserved